



If the box is delivered with a rear panel, insert the panel in the grooves at the back of the sides. Then, from the top to the bottom, push the rear crossbars with the dimensions 19 x 27 mm onto the metal bolts on the side panels. 5 bars in total. In doing so, the holes in the rear crossbars must always be facing forward.



Hang the base panels in the holes provided for this.








Press the beech wood perch bars onto the metal bolts on the upright side panels. 4 pieces per section. In doing so the notch on the bars must always point to the back. Important: With the box size 69.2 cm, the bars are marked with the numbers 1 and 2. The bars marked with the number 1 fit into the top section row. The bars marked with the number 2 fit into the second row from the top and so on.







Now the wire meshes are inserted. The folds must point downwards.

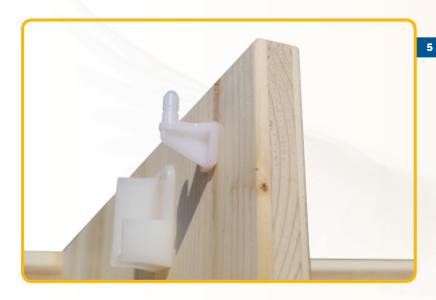

With the upright side panels, the plastic hooks for the top panel (cover) must be screwed only into the middle panels.





Place the coloured swivel doors and the hinges into the sections.

The coloured front doors are fitted always into the top and the middle section rows on the left and in the second and fourth section row from the top always on the right in the section.





Now fit the front doors to the hinges. In doing so, the plastic hook must always point upwards.







Fit the front doors with the hinge onto the hooks of the upright side panels.





Place the second front doors (rod doors) in the sections. Push the two outer front doors forward. The sliding bolt must always point outwards.
There are right- and left-hand front doors.





10

Place the front bars in the sections. The bars are marked with the numbers 1 and 2. The bars with the number 1 are fitted in the top and middle section rows. The bars with the number 2 in the second and lowest rows from the top!



Then, from the outside, fit the front doors onto the hooks of the front bars and hang the two together in the mounting.



12



Fit the front bars with the front doors attached into all of the sections.





13

There are two different variants of the middle doors (separating doors). Left-hand separating doors (marked with number 1) for the top and third section rows from the top, shown here on the left in the picture, and right-hand separating doors (marked with number 2) for the second and fourth section rows from the top, also shown here on the right in the picture.



14

Fit the separating doors to the right and left in the respective sections. Tip: The slider with the hole must always be able to be operated from the open side! The separating door with the dowel in a hole on the inside of the front crossbar.





15

Pull the front bar forward a little with the left hand and fit the separating door with the right hand. To do so, the dowel with the metal spring must first be inserted in the hole in the cross bar. Then the front dowel on the separating door must be guided into the groove of the front bar. Then move the separating door carefully to the side until this snaps into place in the hole in the front bar. The separating door engages in the notch below in the perch bar.





Move the coloured front door with the swivel fitting backwards and fix the dowel on the front face in the slot of the separating door.





Fit the dividing piece. The dowel with the metal spring is inserted into the hole of the crossbar and pressed up. Now carefully move the dividing piece to the side until it engages in the two holes of the perch bar.




18

The top panel is placed onto the hooks of the upright side panels from above.





Insert the floors.

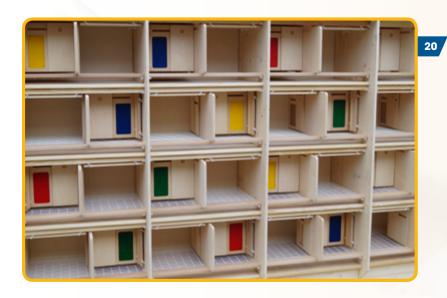

The sectioned box is fully assembled.





This must now be aligned using a spirit level and then be firmly screwed to the back wall.