





If the box is delivered with a rear panel, insert the panel in the grooves at the back of the side panels. Then, from the top to the bottom, push the rear crossbars with the dimensions 19 x 27 mm onto the metal bolts on the side walls. 5 bars in total. In doing so, the holes in the rear crossbars must always be facing forward.

The 4 bars from the top each have a distance piece screwed on, see the photograph!



2

Hang the base panels in the holes provided for this.






Press the beech wood perch bars onto the metal bolts on the upright side walls. 4 pieces per section. In doing so the notch on the bars must always point to the back.







Now the wire meshes are inserted. The folds must point downwards.

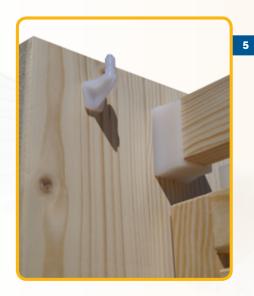

With the upright side panels, the plastic hooks for the top panel (cover) must be screwed only into the middle panels.





Arrange the front doors and front bars in the sections. For each section there is a right-hand, middle and left-hand door





Attach the front doors to the front bars.



Fit the front bars with the attached front doors into each section.



Push the two outer front doors forward.





There are two variants of the middle doors (separating doors).
Left separating door and right separating door. A right separating door and a left separating door are required for each section.
Tip:The slider with the hole must always

be able to be operated from the front!



Pull the front bar forward a little with the left hand and fit the separating door with the right hand. To do so, the dowel with the metal spring must first be inserted in the hole in the cross bar. Then the front dowel on the separating door must be guided into the groove of the front bar. Then move the separating door carefully to the side until this snaps into place in the hole in the front bar. The separating door engages in the notch below in the perch bar.



12

Fit all separating doors





13

The top panel is fitted from above onto the hooks of the upright side panels.



Insert the floors.







Fit the dividing piece. The dowel with the metal spring is inserted into the hole of the cross bar and pressed up. Now carefully move the dividing piece to the side until it snaps into the two holes of the perch bar.





16

Fit all of the dividing pieces.



17

The sectioned box is fully assembled!





This must now be aligned using a spirit level and then be firmly screwed to the back wall.